

# HIGHLINE CUSTOM

Example with 10 mm tile


## CONSTRUCTION GUIDE





Wetroom Materials UK  
1 Well Lane  
Milford  
Derbyshire  
DE56 0QQ  
England  
+ 44 (0) 1332 840 820

Wetroom Materials Ireland  
Unit E1  
Ballymount Ind Est  
Walkinstown  
Dublin 12  
Ireland  
+353 (0)1 2973488



# 1

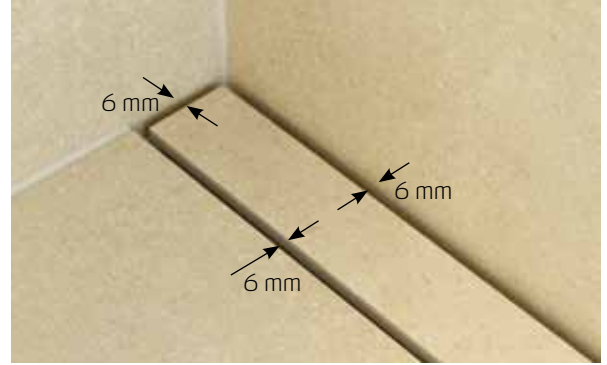

# 2

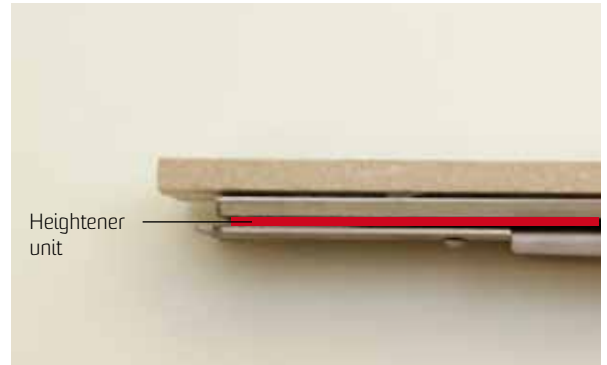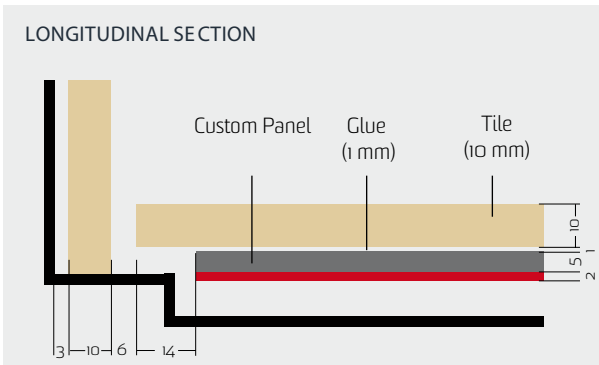

# 3

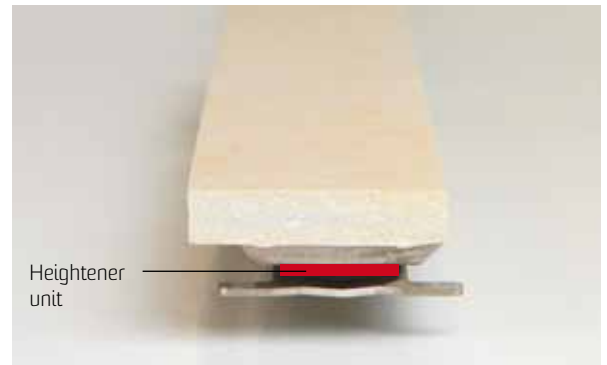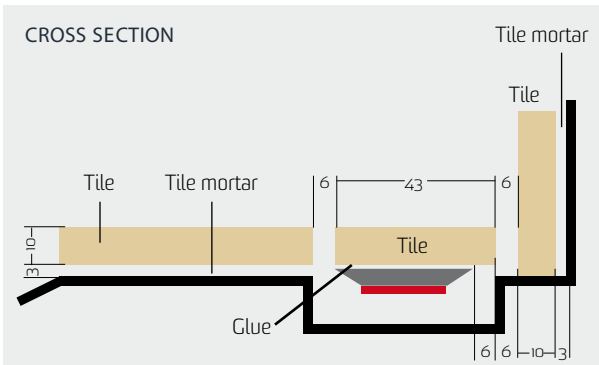

# 4

### GLUE RE COMMENDATIONS

Manufacturer	Product
Bostik	<ul style="list-style-type: none"> <li>• Maxibond</li> <li>• Maxibond X-TREME</li> <li>• Clearbond</li> </ul>
Danalim	<ul style="list-style-type: none"> <li>• Montage Ekstra 292</li> <li>• Turbo tack 291</li> </ul>
Henkel	<ul style="list-style-type: none"> <li>• Pattex no more nails</li> </ul>
Novatech	<ul style="list-style-type: none"> <li>• Tec7</li> <li>• Trans7</li> </ul>

The products are listed randomly.

